


BRUCKNER

montážní návod / installation manual


751.180.1 / 751.190.1

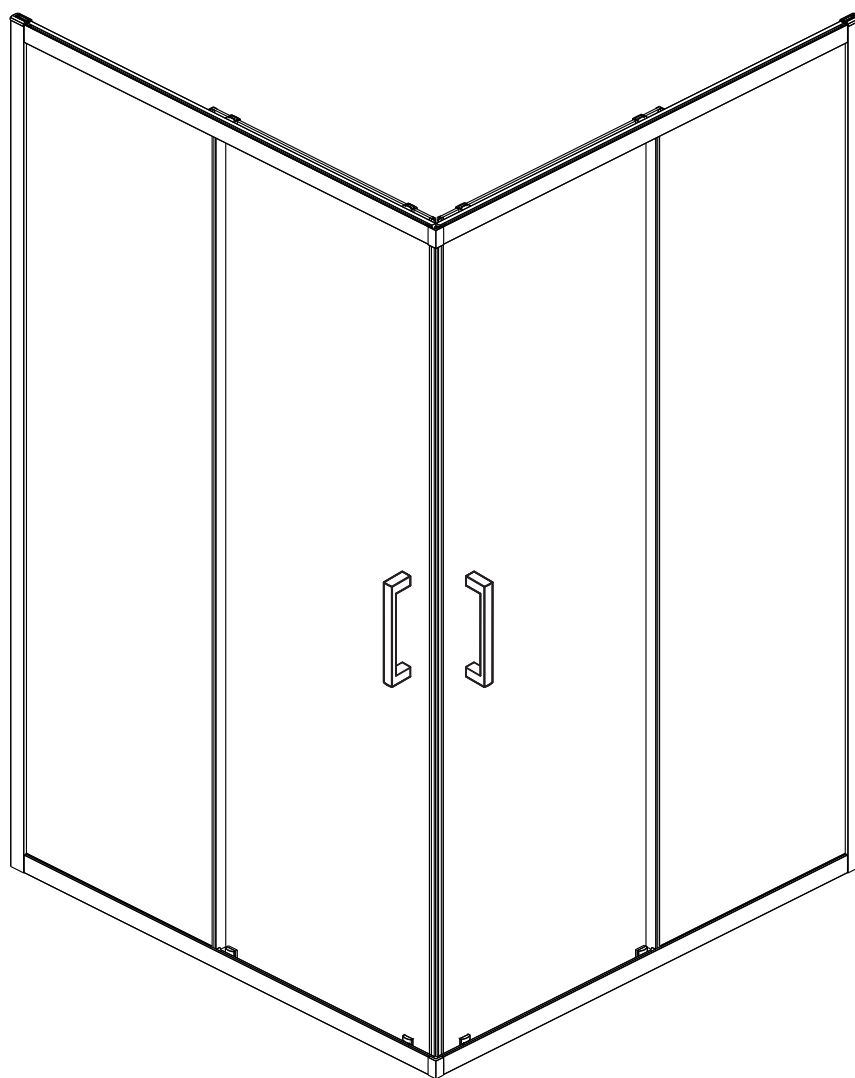








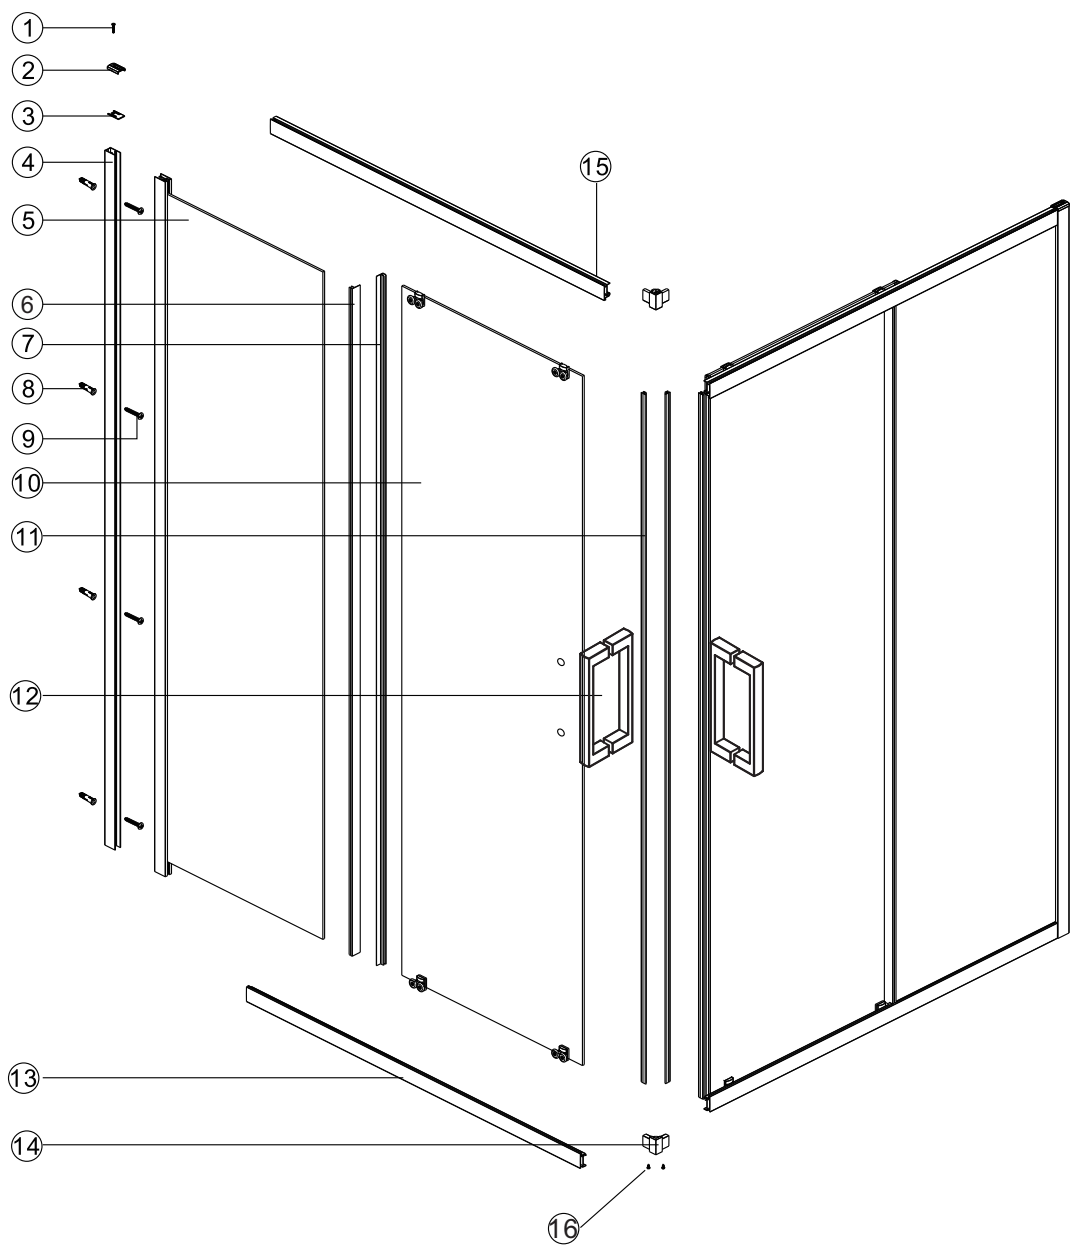











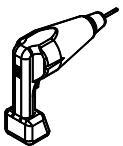
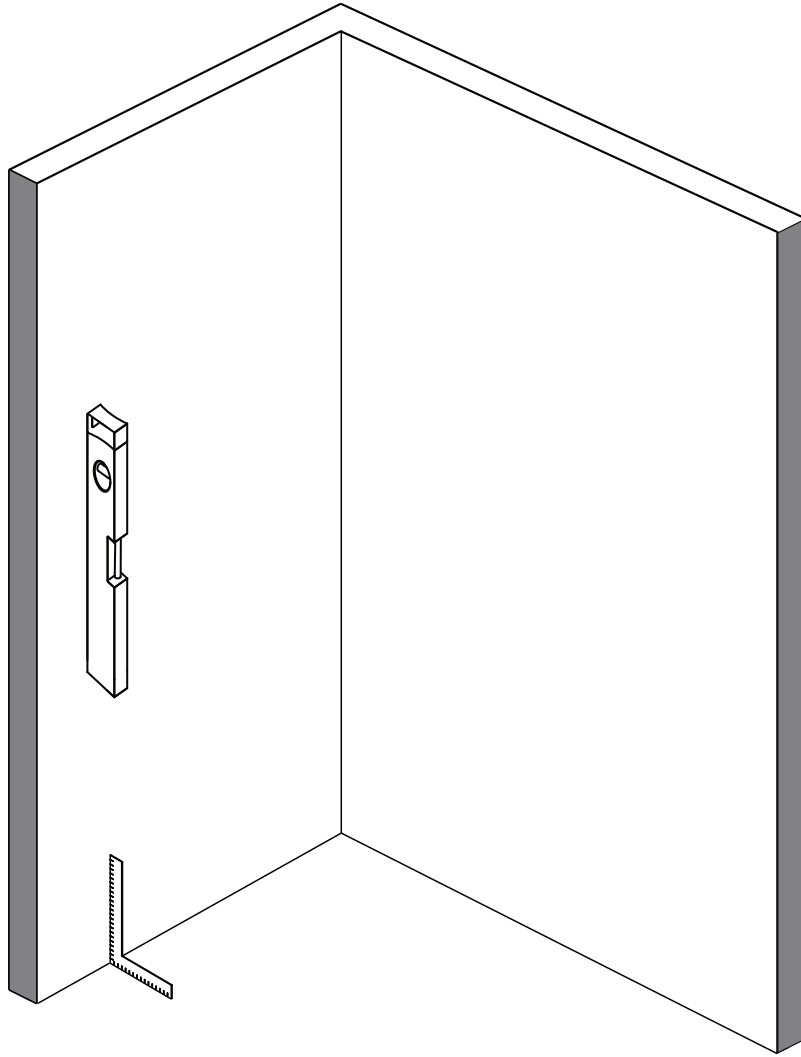
EN 14428
(CA-LR- DA)
Glass shower enclosure
Skleněné sprchové zástěny

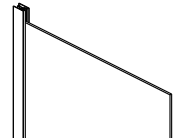BRUCKNER


UBC s.r.o.
Mělnická 87, 250 65 Bořanovice, Pakoměřice, Česká republika
Tel.: +420 283 090 760 | Fax: +420 283 090 761
E-mail: info@sapho.cz | Internet: www.bruckner-sanitary.com

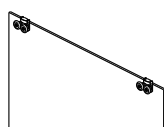

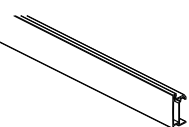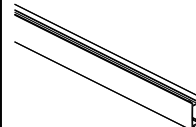
| | | | | | |
|--|---|--|--|---|---|
| 1 X2  ST4X20 | 2 X2  | 3 X2  | 4 X2  | 5 X2  | 6 X2  |
| 7 X2  | 8 X8  | 9 X8  ST4X35 | 10 X2  | 11 X2  | 12 X2  |
| 13 X2  | 14 X2  | 15 X2  | 16 X4  M4X10 | | |



∅ 6mm





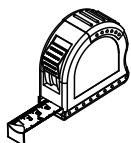


A 01




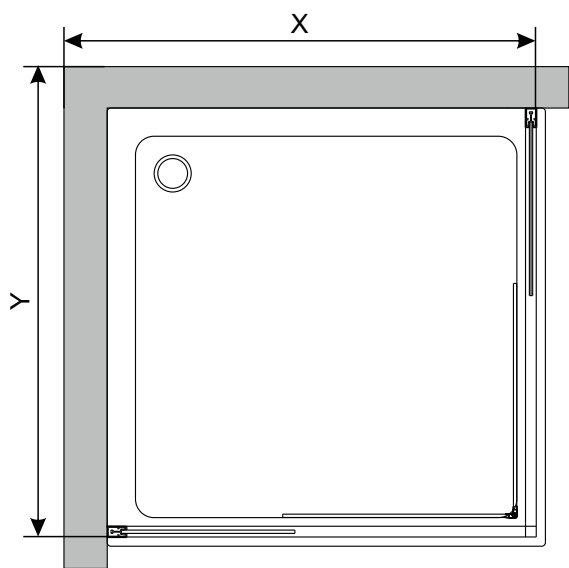


| SIZE | X,mm | Y,mm |
|---------|---------|---------|
| 800X800 | 780~800 | 780~800 |
| 900X900 | 880~900 | 880~900 |





A 02

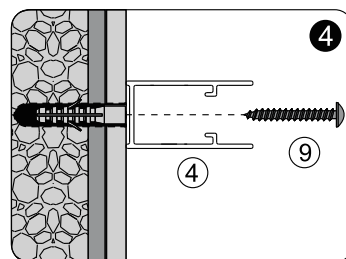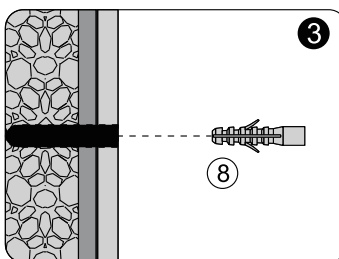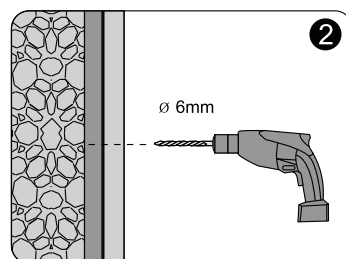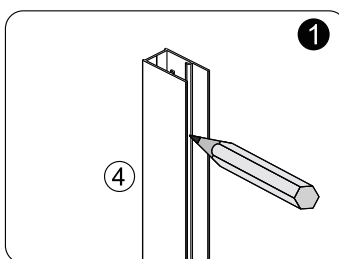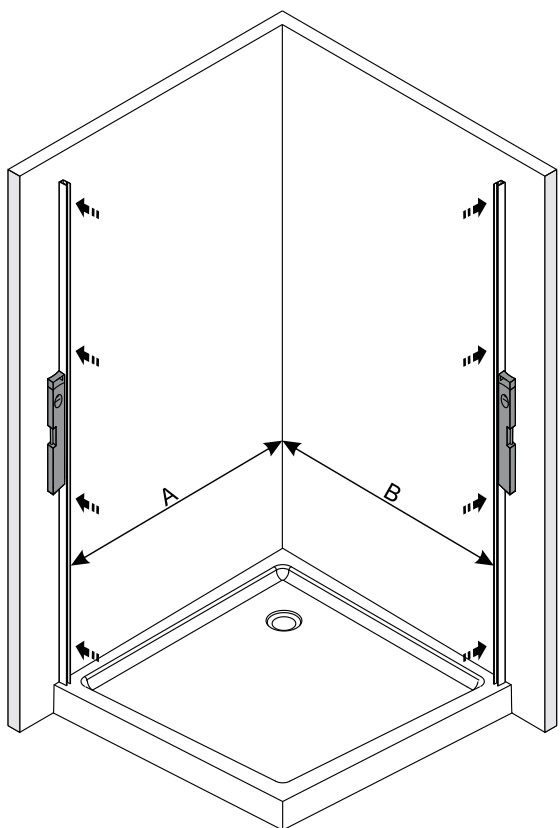







A 03

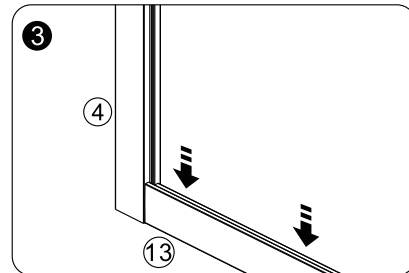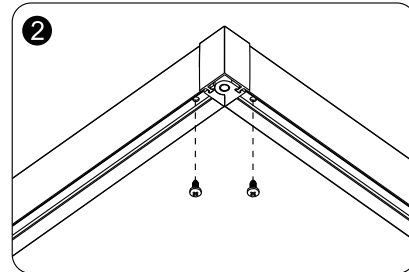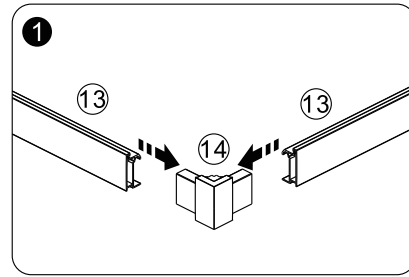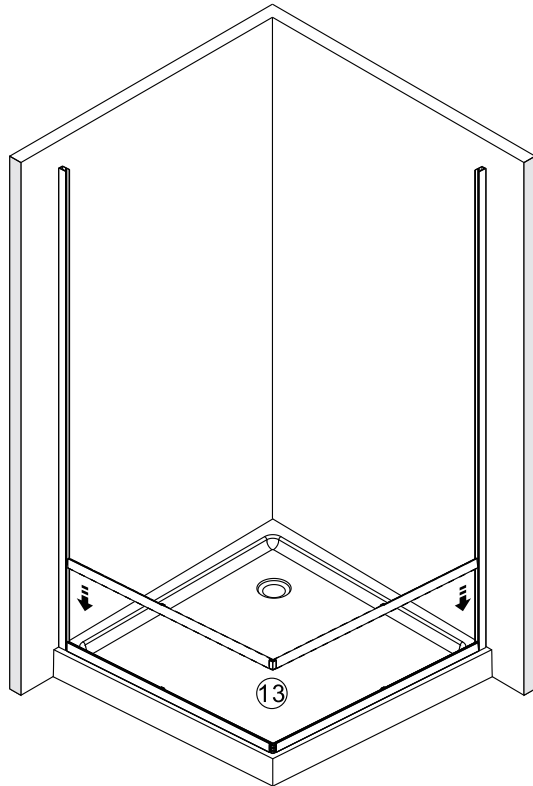




A 04

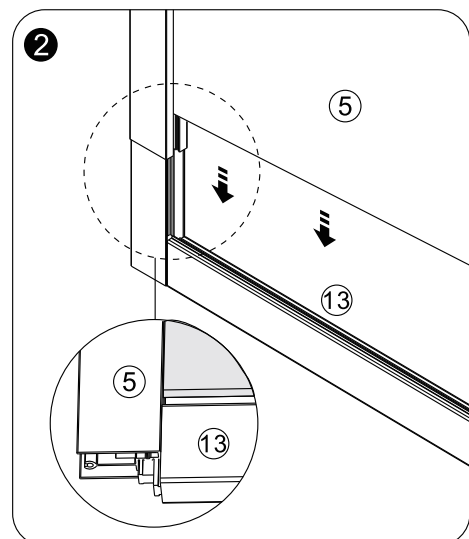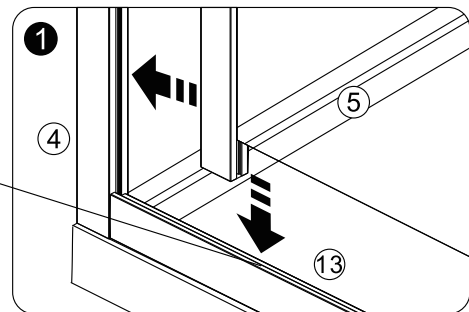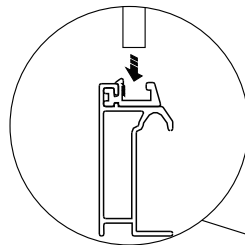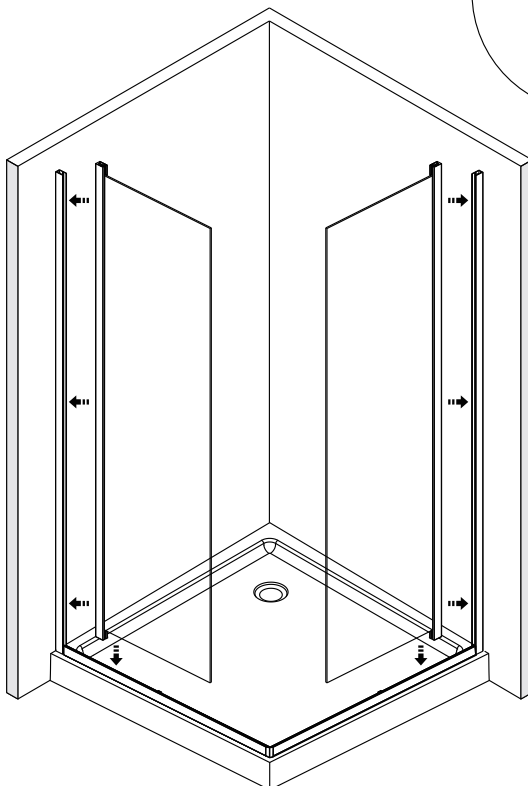



A 05

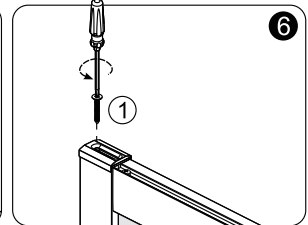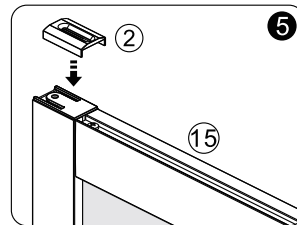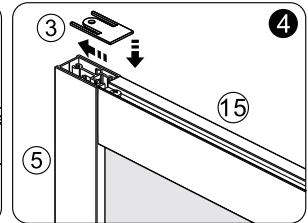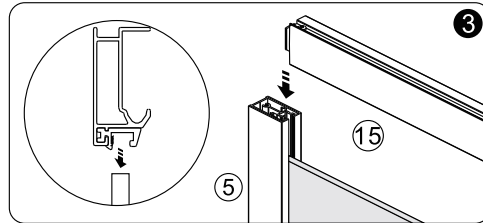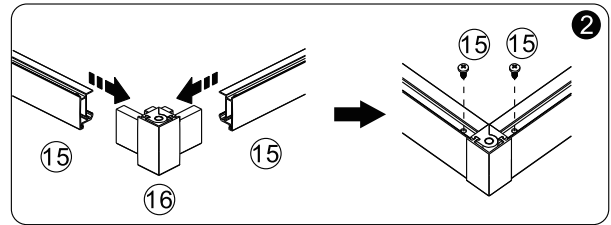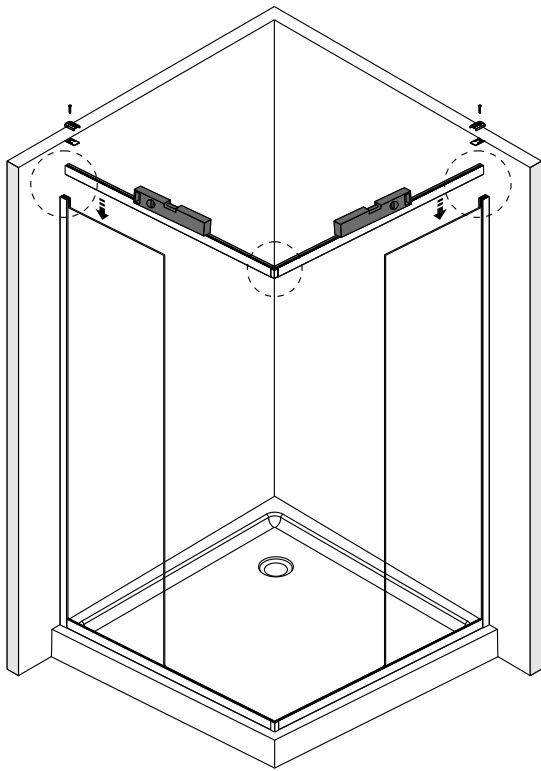




A 06

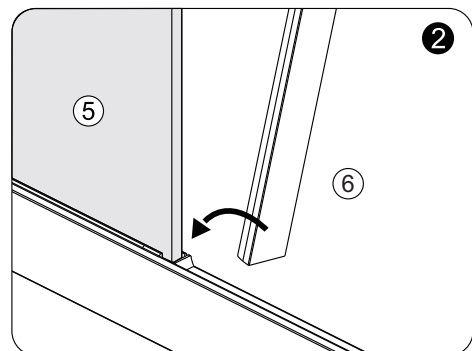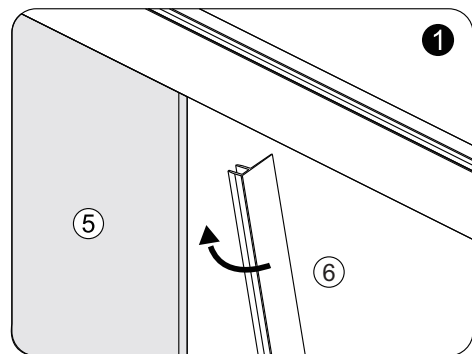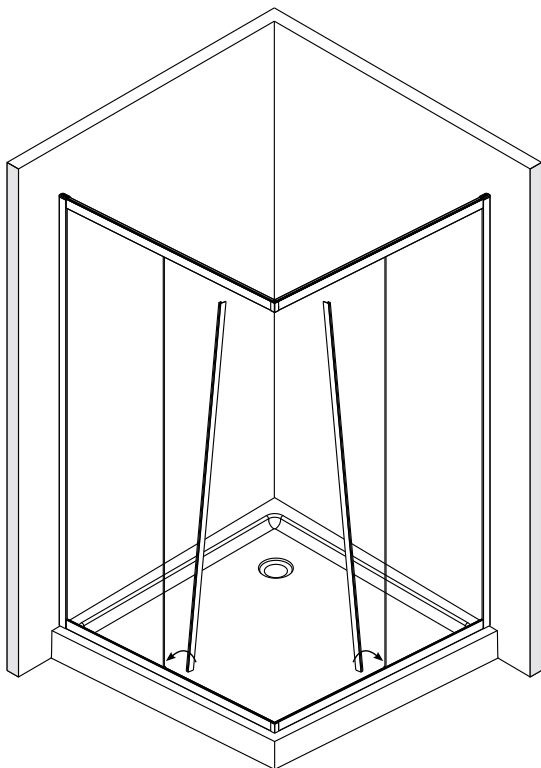

A 07



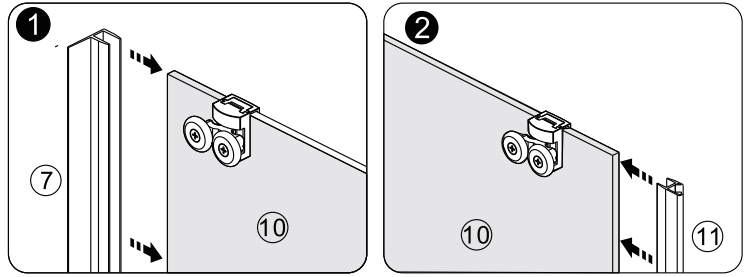
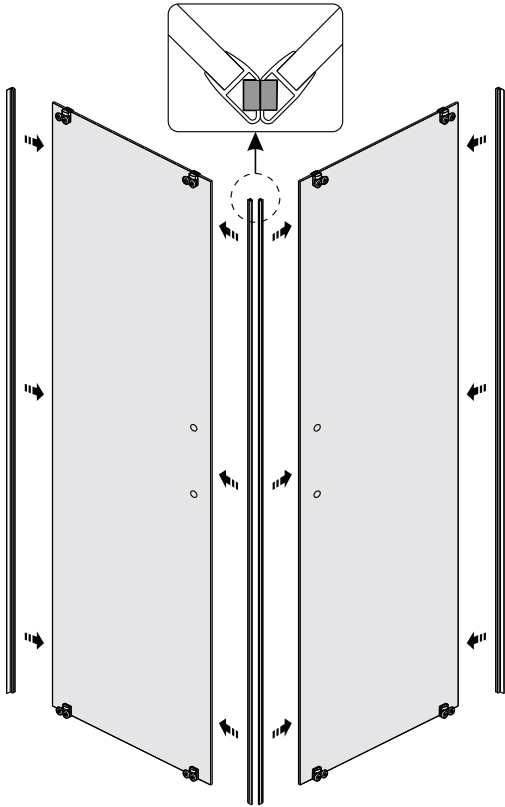


A 08

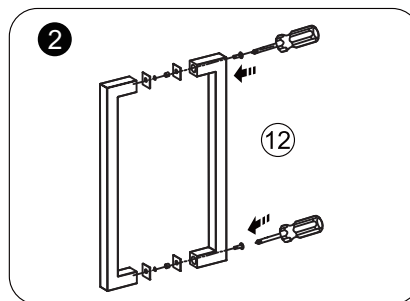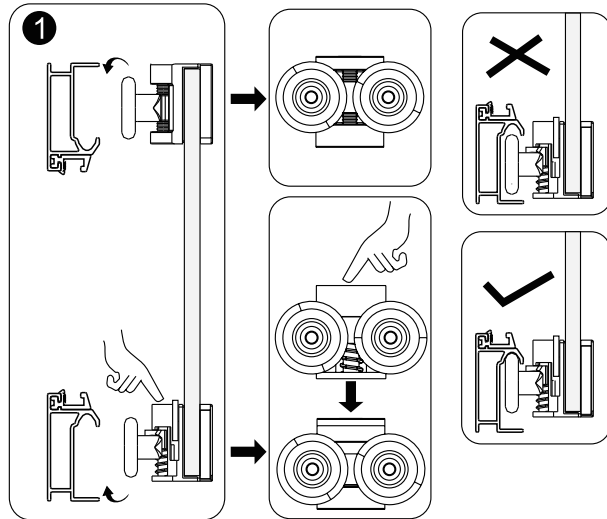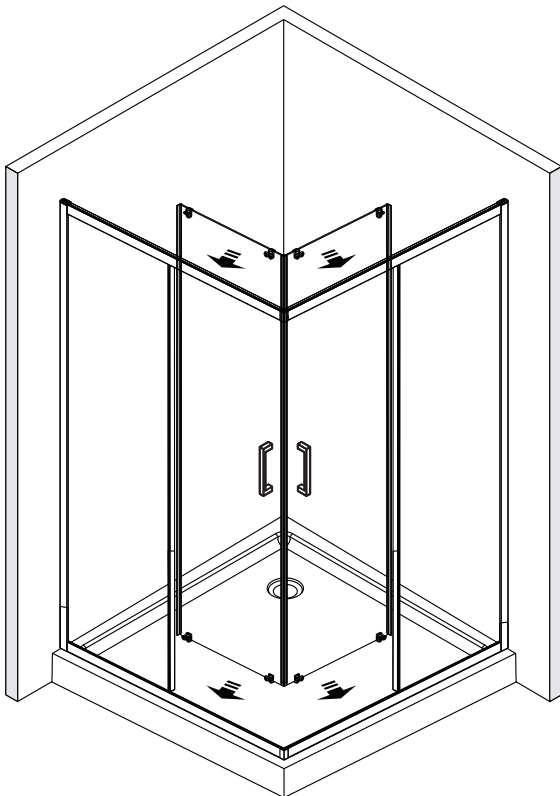

A

09

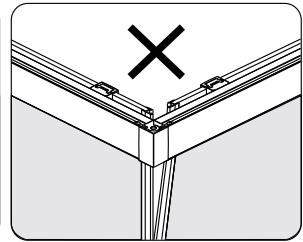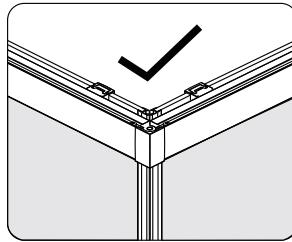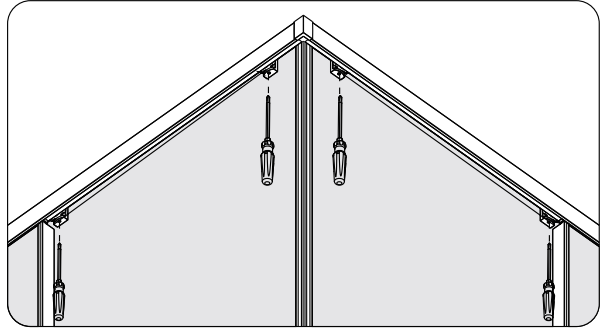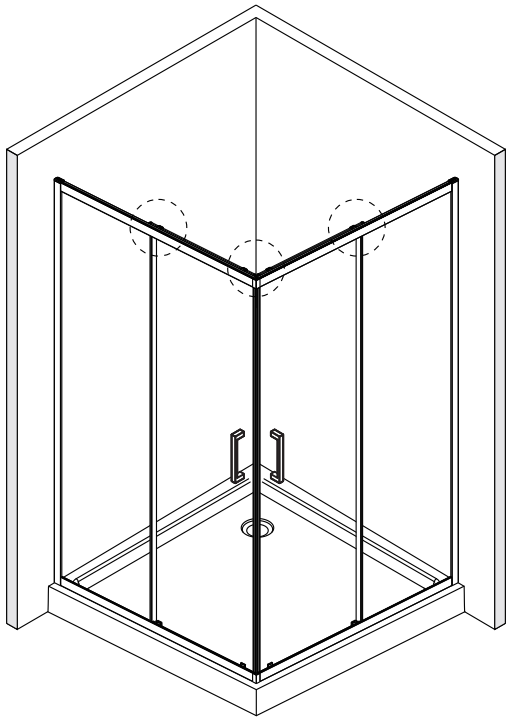

A

10

