
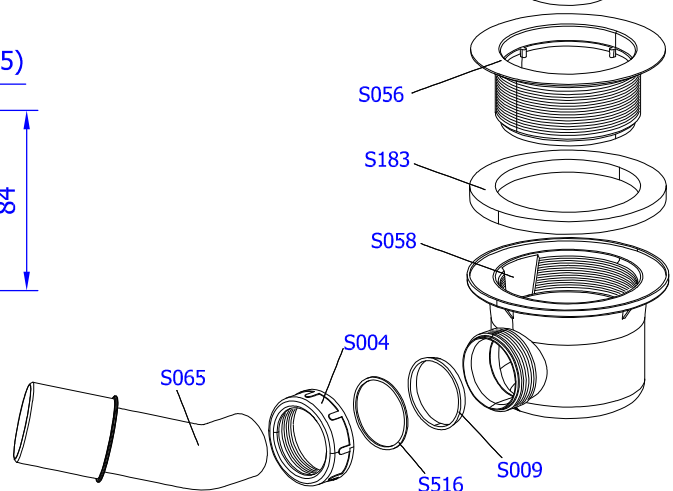
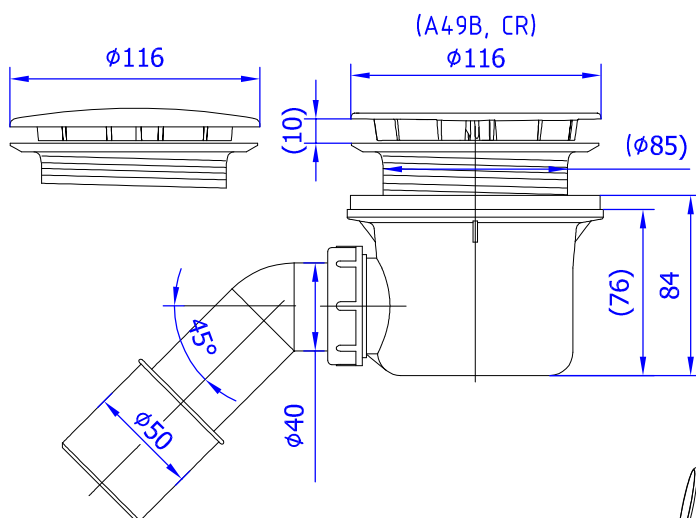
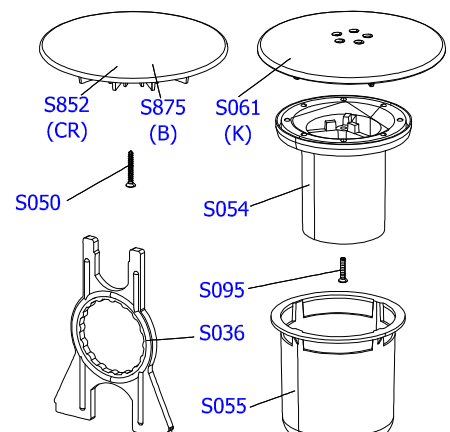
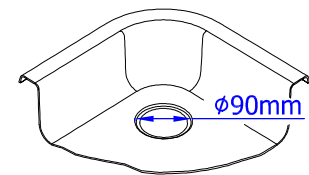


19497

(D) MONTAGEANLEITUNG:	ABLAUFGAMITUR FÜR DUSCHWANNEN WEIß (VERCHROMT, METAL LUX)
(GB) INSTALLATION INSTRUCTIONS:	SCHOWER WASTE AND TRAP WHITE (CHROME, METAL LUX)
(F) NOTICE DE MONTAGE:	SIPHON POUR RECEVEUR BLANC (CHROME, METAL LUX)
(CZ) NÁVOD K MONTÁŽI:	SIFON VANIČKOVÝ BÍLÝ (CHROM, KOV LUX)
(PL) INSTRUKCJA MONTAŻU:	SYFON BRODZIKOWY KRZY BIAŁY (CHROM, METALOWY LUX)
(SK) NÁVOD NA MONTÁŽ:	SIFÓN VANIČKOVÝ BIELY (CHRÓM, KOV LUX)
(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ:	СИФОН ДЛЯ ДУШЕВОГО ПОДДОНА (ХРОМИРОВАННЫЙ МЕТАЛЛ)
(E) INSTRUCCIONES DE MONTAJE:	CONJUNTO DE DESAGÜE PARA PLATOS DE DUCHA BLANCO (CROMADO, METAL LUX)
(RO) INSTRUCȚIUNI DE MONTAJ:	SIFON CĂDIȚĂ ALB (CROMAT, CROMAT LUX)

71 / R5 / 06 / 13 / S195

A49B
A49CR
A49K

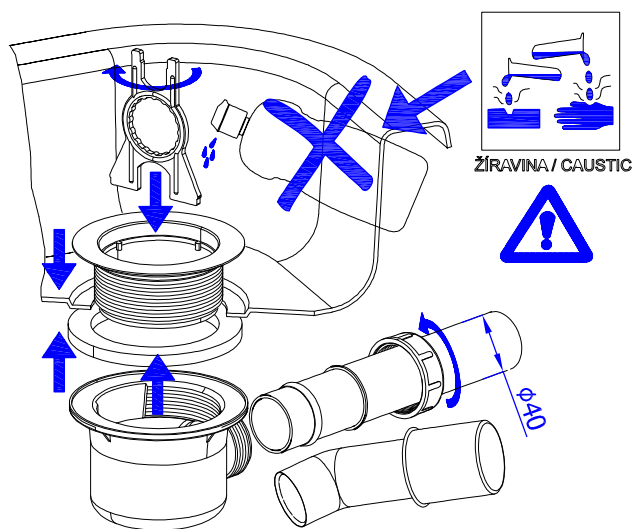

CE

SanSwiss AG, 4624 Härkingen, Schweiz

08
EN 14428:2008+A1
IR - CA - DA
personal hygiene