


KALDEWEI


**CAYONPLAN MIT WANNENTRÄGER EXTRAFLACH
WITH LOW PROFILE-SUPPORT | SUPPORT EXTRA PLAT
SUPPORTO RIBASSATO | SOPORTE EXTRAPLANO**

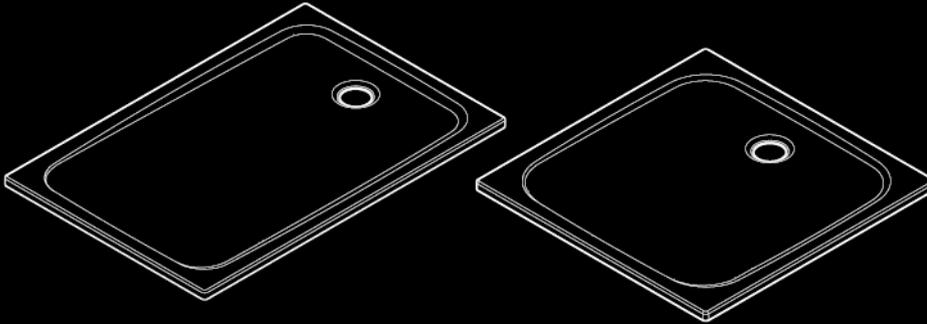


2

DE Montageanleitung | EN Installation instructions


NL Montagehandleiding | FR Instructions de montage | IT Istruzioni di montaggio
ES Instrucciones de montaje | PT Instruções de montagem | DA Monteringsvejledning
NO Monteringsanvisning | SV Monteringsanvisning | FI Asennusohje | ET Paigaldusjuhised
LV Montāžas instrukcija | LT Montavimo instrukcija | PL Instrukcja montażu | CS Návod k montáži
RU Инструкция по монтажу | UK Інструкція з монтажу | SK Návod na montáž | HU Összeszerelési utasítás | RO Instrucțiuni de montare | SL Navodila za montažo | HR Upute za montažu
BG Ръководство за монтаж | EL Οδηγίες συναρμολόγησης | TR Montaj talimatı | AR بيكرتلا ليلىد
ZH 安装说明书 | JA 設置説明書 | KO 조립설명서 | ID Petunjuk perakitan | TH คำแนะนำในการติดตั้ง
VI Hướng dẫn lắp ráp | HI स्थापना निर्देश

1.**2.**


DIN EN 18 157
 DIN EN 18 534
 DIN 52 460

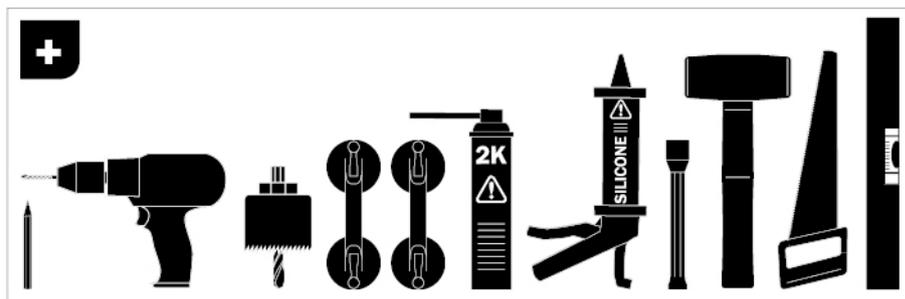


CAYONOPLAN



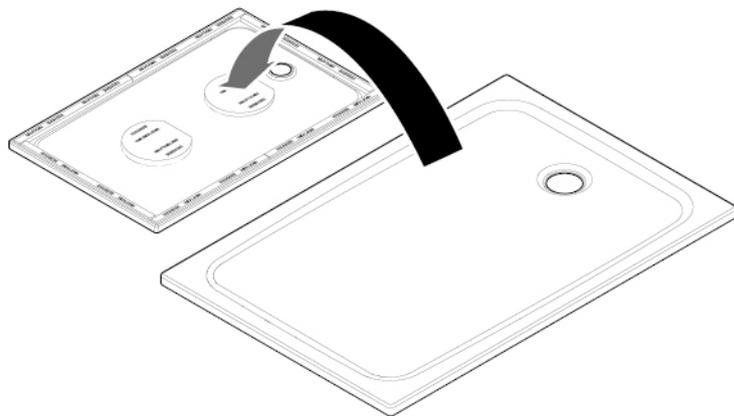


A

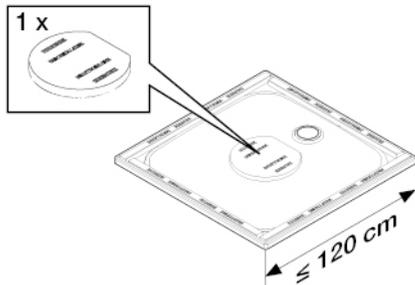



B

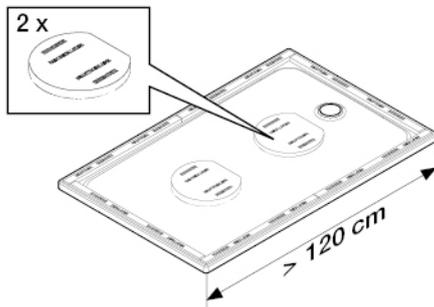

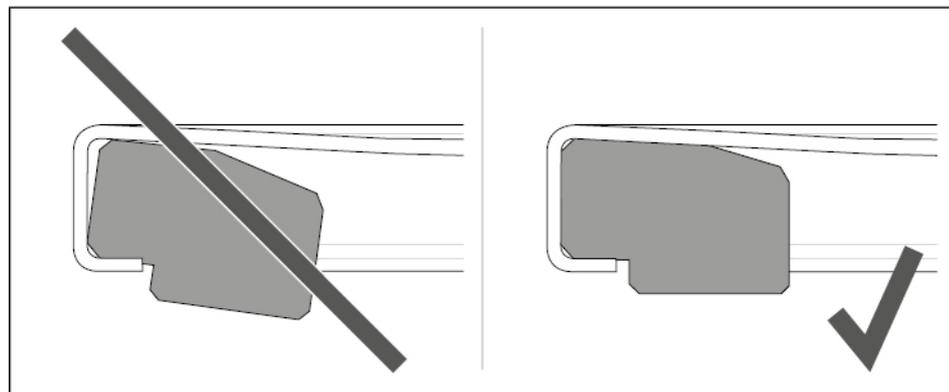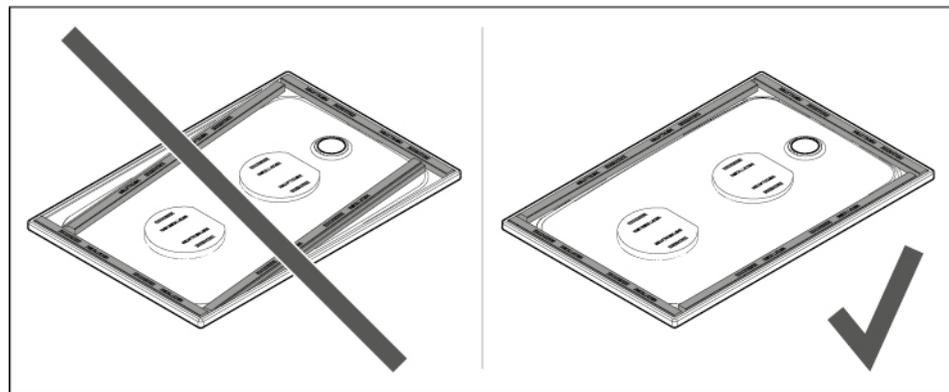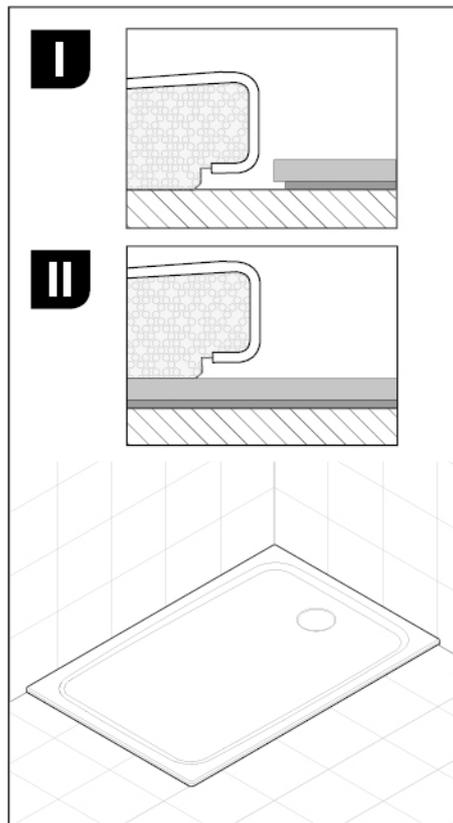




3.

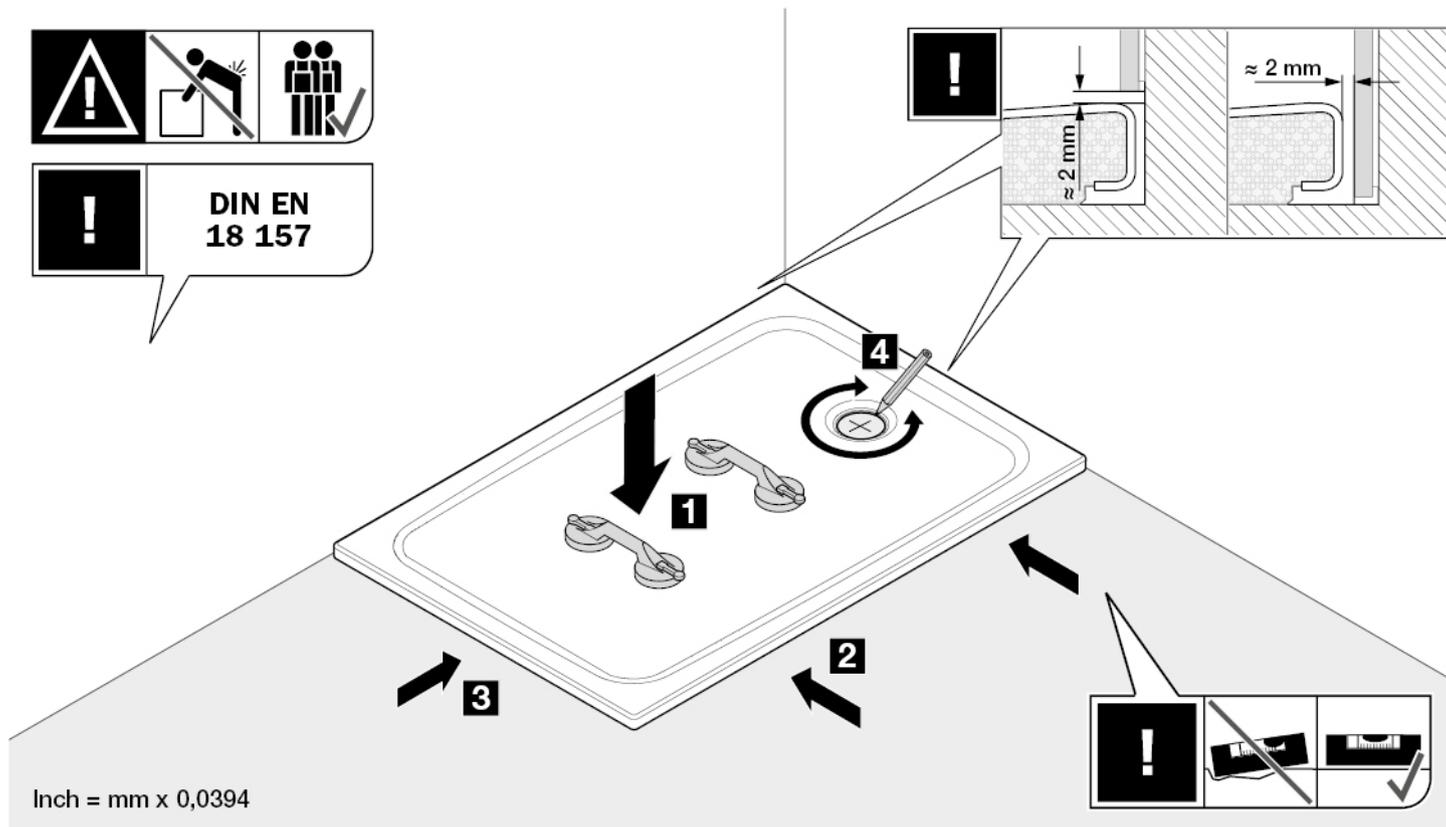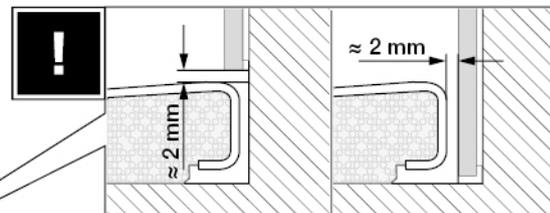

Inch = mm x 0,0394









a 4.



a 5.

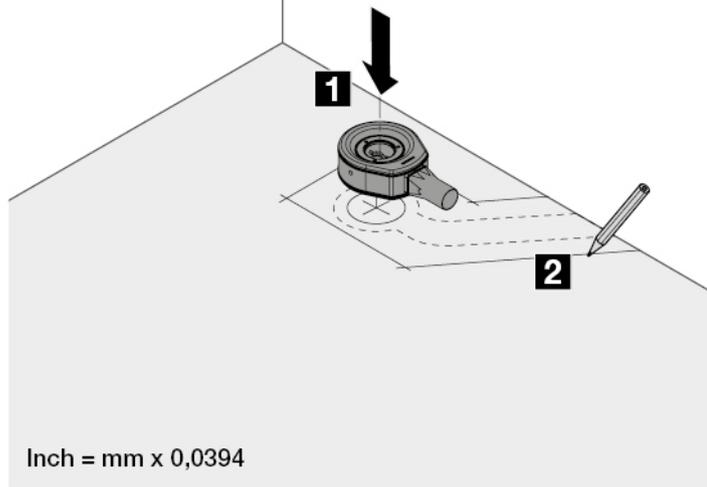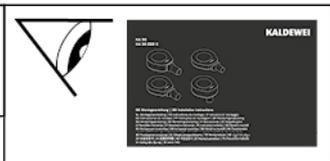

Inch = mm x 0,0394



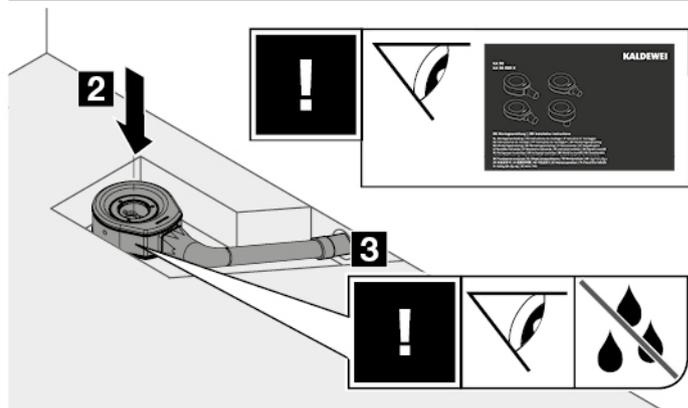
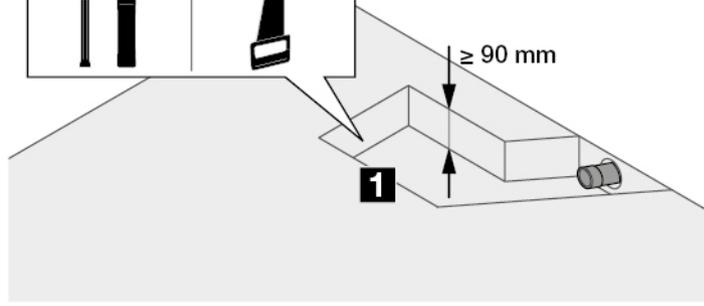




b **4.**



b **5.**

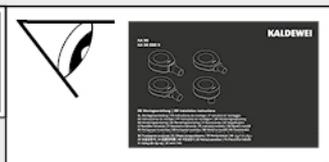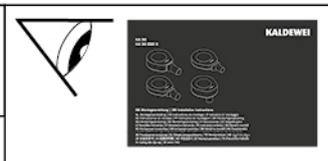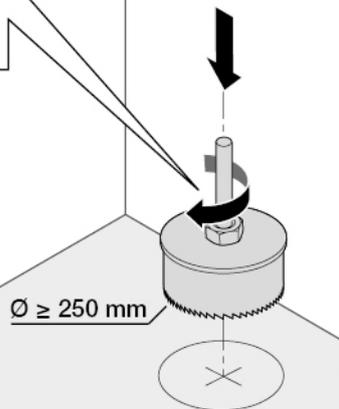



Inch = mm x 0,0394




6.






7.

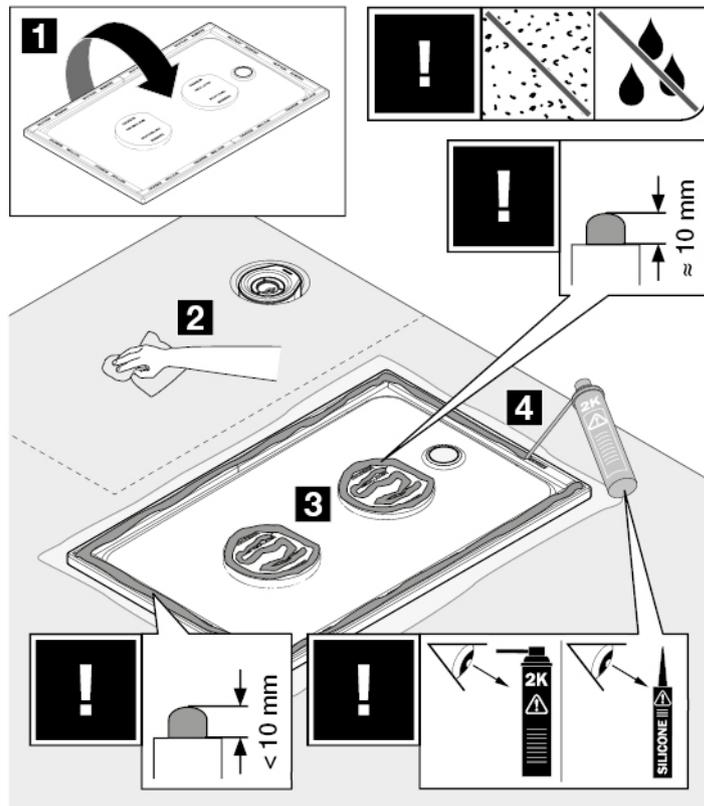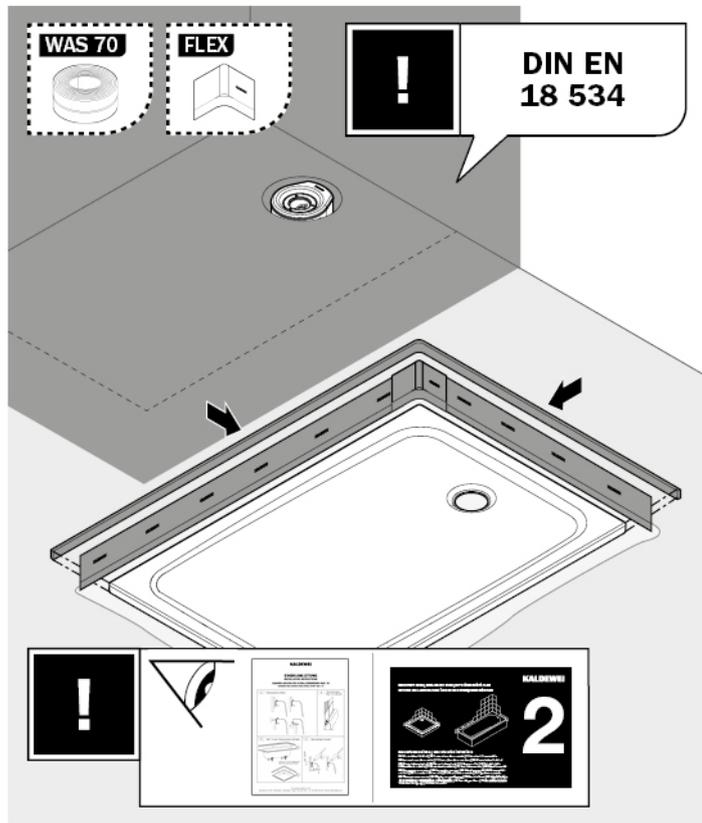



8.

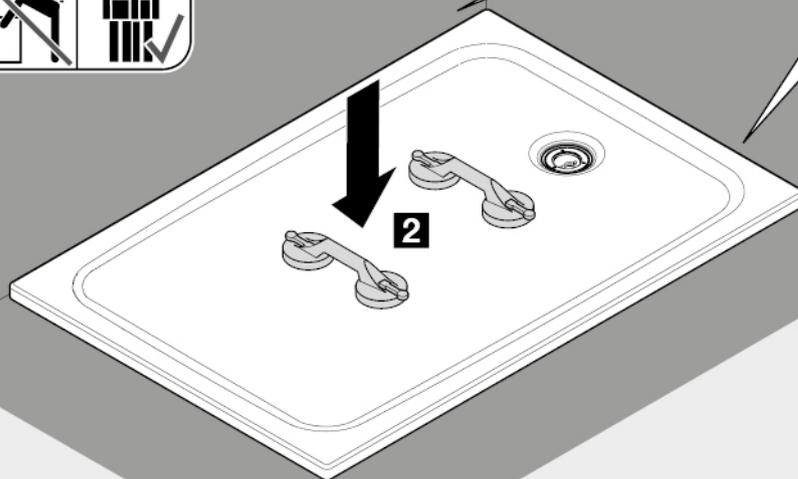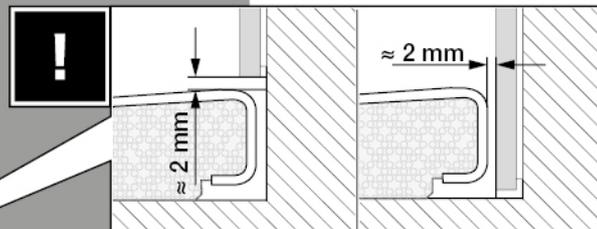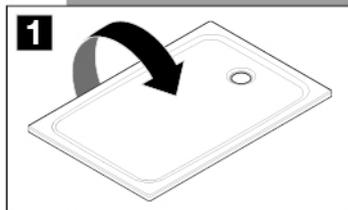

Inch = mm x 0,0394




9.






10.



1

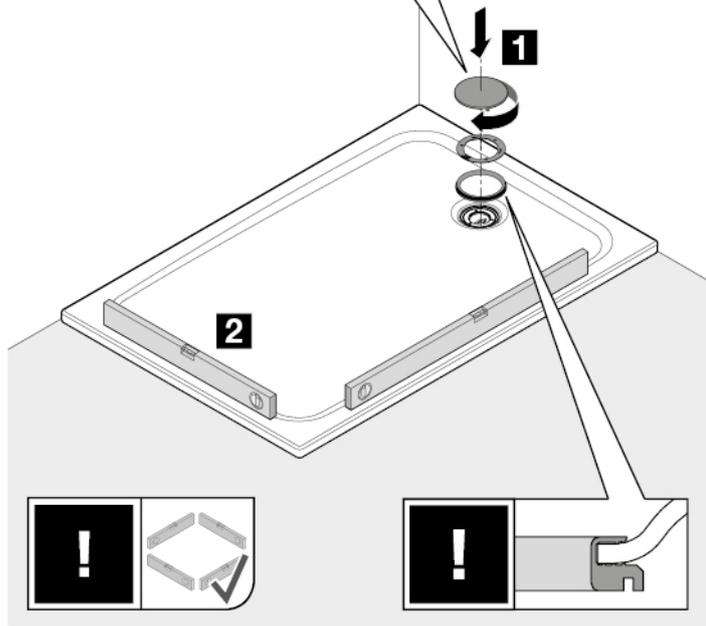


2

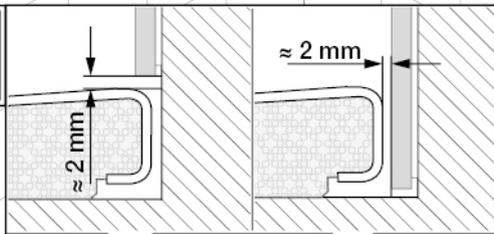


≈ 2 mm




≈ 2 mm

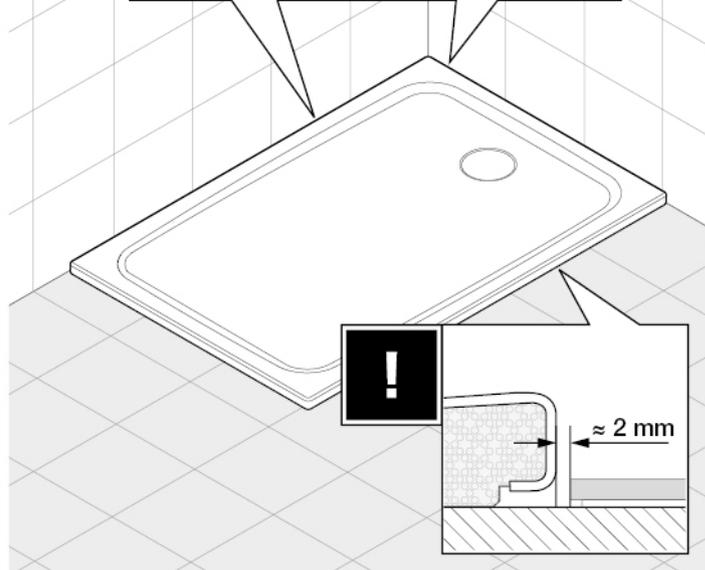

≈ 2 mm



11.

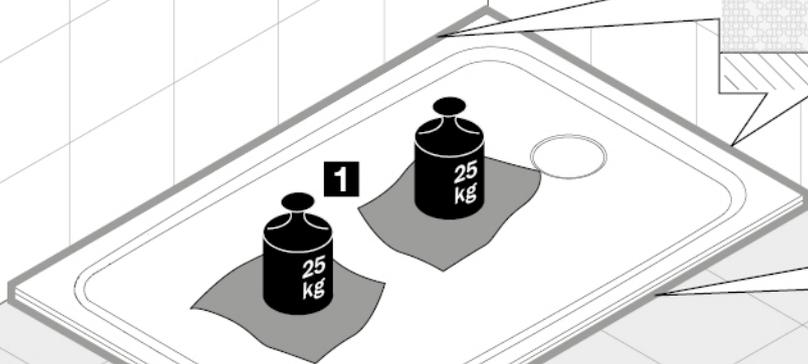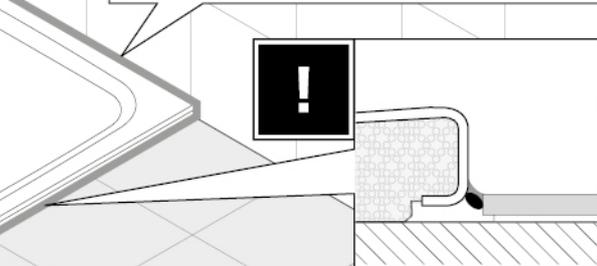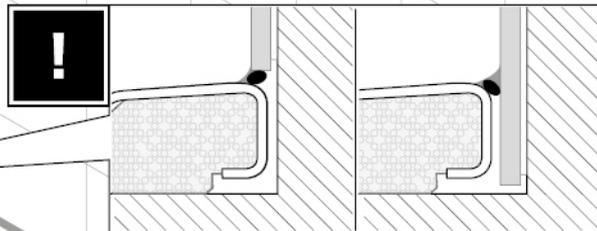

KALDEWEI



Franz Kaldewei GmbH & Co. KG
Beckumer Str. 33-35

D-59229 Ahlen

 +49 2382 785 0

 +49 2382 785 200

www.kaldewei.com

