

Installation is carried out using:

- 1 set of fastenings comprising, 2 dowels S 14, 2 screws M 12 x 150, 2 nylon collar nuts M 12
  - or 1 wall mounting frame order no. 9953 00
- The wall mounting frame can be supplied and includes all the necessary fastenings.
- 1 inlet connection
  - 1 WC connecting sleeve NW 100
  - 1 WC seat and cover


The WC must be installed according to the specification drawings for the respective model.

These measurements are based on an installation height of 400 mm, from finished floor to seat height of the WC.

Only collar nuts made from nylon or other soft materials should be used for installation. It is not permitted to use metal washers. Tighten the collar nuts by hand until the white cement oozes out around the sides.


1

The mounting frame (where necessary) is cemented into the untiled wall.

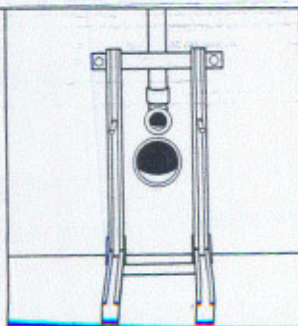

2

The inlet sleeve must protrude from the wall by 70 mm and the screws by 65 mm. The outlet should be fitted flush with the raw wall, at most with the finished tiled wall. The WC connecting sleeve must be fitted individually.

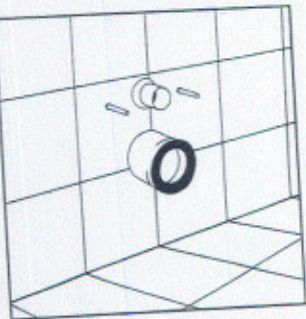

3

We recommend applying white cement to the rear of the WC to compensate for any unevenness. Grease may be applied to the wall surface to facilitate subsequent dismantling. Mount the WC and WC-seat and cover. Check the WC for water tightness.

